

PIERCE[®]

PULLING FOR YOU

OWNER'S MANUAL
CATTLE SIREN
PCH324



REGISTER YOUR PRODUCT!

We want to serve you.
Please register your product at
www.piercearrowinc.com/warranty/product-registration

Why register?

- product updates via email
- maintenance reminders via email
- quick technical service help if you encounter a problem

SPECIFICATIONS


Application	Calling in cattle with a loud siren.		
Product Dimensions	6.13" x 5" x 5"	Material Type	steel
Duty Cycle	2 mins.	Decibel Level	105 dB
Warranty	1 year	Draw	96W / 8 - 25 amp

USER WARNING

- Extended use over long periods of time shortens the life of the cattle siren. Designed to be used with the toggle switch.
- When exposed to the elements, do not install upside-down or water will collect within the siren and your warranty will be voided. Covered cake feeders are the exception (as long as the siren will be hidden from the elements).



WIRING

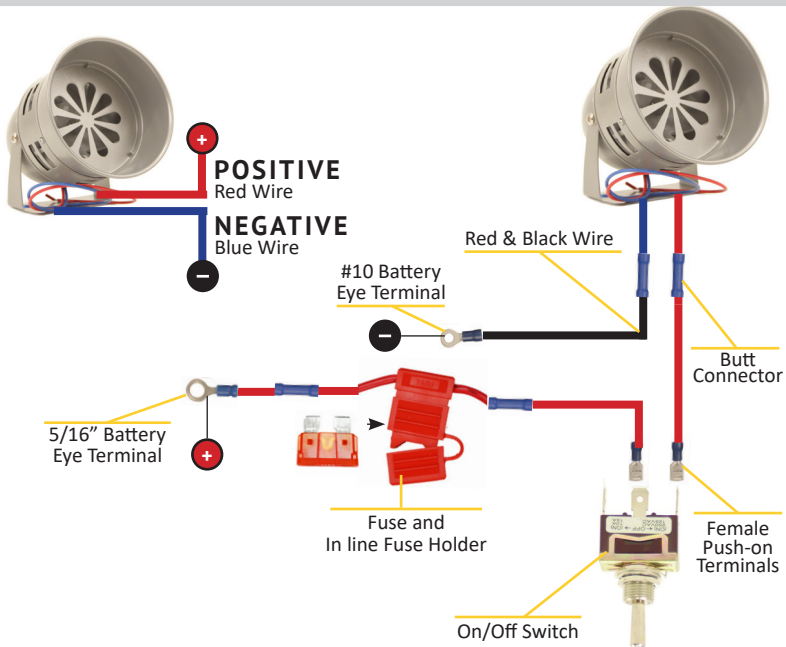

STANDARD DUTY CATTLE SIREN (PCH324)



AVAILABLE WIRING (PCHKD)



- (1) On/Off Switch
- (4) Butt Connectors
- (2) Female Push-on Terminals
- (1) Fuse and Fuse Holder
- (1) 5/16" Battery Terminal
- (1) #10 Battery Eyes
- (1) 10' Red and Black Wire

INSTALLATION

- **Step 1:** Bolt the cattle siren to a flat surface such as a headache rack or under the hood using (2) 1/4" bolts or (2) #12 self tapping screws.
- **Step 2:** Connect positive and negative wire from siren to the 10' red and black wire from the kit with butt connectors.
- **Step 3:** Mount the On/Off switch in the truck's cab.
- **Step 4:** Run positive wire from siren to On/Off switch.
- **Step 5A:** Run the red wire from the On/Off switch to fuse link near the battery. Connect in line fuse holder with butt connectors.
- **Step 5B:** Run the red wire from the fuse to the positive battery terminal. Connect with the large 5/16" battery terminal.
- **Step 6:** Run black wire from siren to negative battery terminal. Connect with #10 battery terminal
- **NOTE:** For installation with existing wiring, simply cut off connector and splice in your wiring with butt connectors.

LIMITED WARRANTY

Pierce Arrow Inc. warrants that the goods, equipment, and merchandise manufactured by Pierce Arrow Inc. are free from defects in material and workmanship. The limited warranty includes replacement or repair of defective mechanical and electrical parts for a period of one year from the date of shipment by Pierce Arrow Inc.

OBTAINING WARRANTY SERVICE

Pierce Arrow Inc. must be notified of any defect before repair or replacement may be granted. The merchandise must be delivered by the purchaser to Pierce Arrow Inc. in Henrietta, Texas at the purchaser's expense. Any repairs not made by Pierce Arrow Inc. are not covered by the limited warranty and are the responsibility of the purchaser.

Pierce Arrow Inc. reserves the right to repair or replace defective parts or products in its sole discretion. The cost of any repairs not covered by the warranty will be charged to the purchaser.

EXCLUSIONS

All Pierce products are manufactured for a specific intended purpose. The Pierce Arrow Inc. limited warranty does not cover, and Pierce Arrow Inc. is not liable for, damage arising from any use other than the specific intended use of each product.

All coolers manufactured by Pierce are warranted for general cooling, and are not guaranteed to produce cooling sufficient for any specific purpose or for specific temperature. Pierce is not liable for any injury or damage arising from insufficiently cooled objects placed in the cooler, including but not limited to medications and perishables.

The Pierce Arrow Inc. limited warranty does not cover:

- Ongoing maintenance parts or repair due to normal wear and tear, and
- Any change or defect due to accident, misuse or any use for which the equipment was not intended, improper or unauthorized repair, failure to provide regular maintenance, and deterioration due to weather or road conditions.

Purchasers should consult their owner's manual for safety, installation, operation, and maintenance guidelines.

The Pierce Arrow Inc. limited warranty does not cover purchaser's cost of labor, transportation, shipping damages, installation or removal costs, down time, loss of profit or goodwill, or any other special, incidental, indirect, or consequential damages, concerning

or related to any product or part, whether based upon negligence, strict liability, breach of contract, breach of warranty, misrepresentation, or any other legal theory.

Merchandise manufactured by Pierce Arrow Inc. is not designed or intended for the movement of people and are not to be used in the operation of elevators or other improper uses. Any improper use of the product may void the warranty.

OTHER MANUFACTURERS' WARRANTIES

Pierce Arrow Inc. makes no warranty, expressed or implied, to finished products manufactured or supplied by other manufacturers, and sold by Pierce Arrow Inc. to the purchaser, including but not limited to, any vehicle to which our product is affixed and any accessories. Such merchandise is subject to the manufacturer's warranty only, which will be provided upon request.

CONDITIONS OF SALE

When placing an order with Pierce Arrow Inc., the terms and conditions provided for payment, shipping, delivery and claims create an agreement between the purchaser and Pierce Arrow Inc. The agreement is to be performed in Clay County, Texas.

RETURNS: No returns are accepted without prior authorization. All items must be returned in their entirety. Please contact a sales representative for authorization. Upon authorization, returns must be shipped freight prepaid and may be subject to a 15% restocking fee. Please do not send returns COD. No returns will be accepted later than 30 days from the date of invoice.

DAMAGED GOODS: Pierce Arrow Inc. is not responsible for, and has no liability for:

- Damage arising during shipment
- Any change or defect due to accident, misuse or any use for which the equipment was not intended, improper or unauthorized repair, failure to provide regular maintenance, and deterioration due to weather or road conditions.

CLAIMS: Claims for breakage or damages during shipment must be made to the carrier at the time of delivery. If a signature is required, you must notify the driver and sign that there was damage. You must notify Pierce Arrow Inc. of the damage promptly so that a claim can be filed.