

PIERCE[®]

PULLING FOR YOU

OWNER'S MANUAL
CATTLE SIREN
PS093



VISIT OUR WEBSITE!

We want to serve you.
Please see our product line at
www.piercearrowinc.com



SPECIFICATIONS

Application	Calling in cattle with a loud siren.		
Product Dimensions	4.5" x 4.5" x 6.33"	Material Type	steel
Duty Cycle	10 mins.	Decibel Level	135 dB
Warranty	2 years	Draw	96W / 8 - 25 amp

USER WARNING

- Extended use over long periods of time shortens the life of the cattle siren. Designed to be used with the toggle switch.
- Siren must be installed with moisture drain facing down. DO NOT install upside-down or horizontally on surface or water will collect within the siren and your warranty will be voided.

HEAVY DUTY CATTLE SIREN (PS093)

 


AVAILABLE PCHKD WIRING KIT



- (2) 5/16" Ring Terminal
- (2) 1/4" Push-On Terminal
- (1) 2-Pin Connector
- (1) On-Off Switch
- (4) Butt Connectors
- (1) Fuse and Fuse Holder
- (1) 16 gauge Wire, 15' long with Connector, Red and Black


CATTLE SIREN WIRING

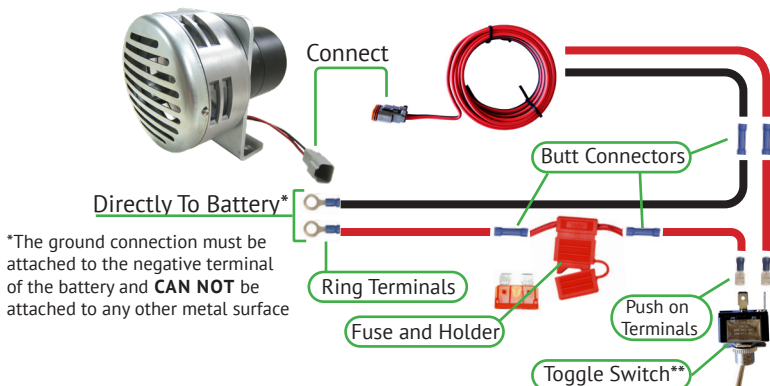


*The ground connection must be attached to the negative terminal of the battery and **CAN NOT** be attached to any other metal surface

Toggle switch switch may have three connection terminals. Center terminal **MUST connect to power. Either top or bottom terminal may be used for on/off function

 
ENVIRONMENTAL SEALED CONNECTOR WIRING

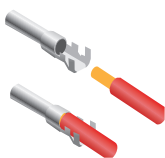

 Step 1: Strip the red and black wire back a maximum of 1/4" and insert into the pin connectors and crimp.

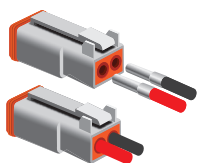


 Step 2: Insert the female pins into the connector from behind. Push until you hear a click.

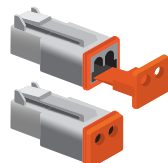


Step 3: Insert the wedge into the front of the plug and ensure all connections are secure

 
DRAIN NOTE

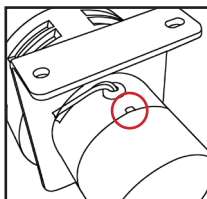

 
The moisture drain is located on the bottom of the cattle siren, and **must be facing downwards** to prevent moisture from accumulating.

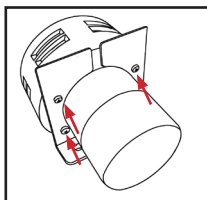

 To rotate mounting bracket for upside down mounting remove the four philips head screws.

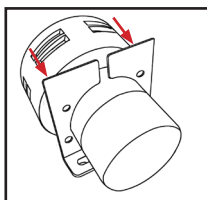

Pull bracket back.

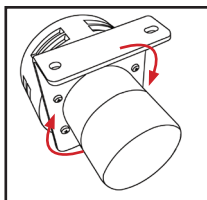 

Rotate bracket and bolt back into place. This will allow the moisture drain to remain facing downwards.

INSTALLATION

- **Step 1:** Bolt the cattle siren to a flat surface such as a headache rack or under the hood using (2) 1/4" bolts or (2) #12 self tapping screws.
- **Step 2:** Plug the male end to the female end of the connectors.
- **Step 3:** Mount the On-Off switch in the truck's cab.
- **Step 4:** Run black wire to negative battery terminal.
- **Step 5A:** Run the red wire to the center terminal of the toggle switch and connect with push on connectors.
- **Step 5B:** Run the red wire from the switch to the fuse holder using butt connectors.
- **Step 5C:** Run the red wire from the fuse holder to the positive battery terminal, with the large terminal.
- **NOTE:** For installation with existing wiring, simply cut off connector and splice in your wiring. Ensure ground connection is attached directly to the negative battery terminal. It **CAN NOT** be attached to any other metal surface. Be sure to keep all wiring clear of any sharp edges, moving parts or any hot areas

Do I have to buy a wiring kit?

A wiring kit is available for ease of installation. Some customers already have 16 gauge two-way wire, terminals, switches and breakers. Some don't have those parts on hand so we created the kit. The part number for the wiring kit is PCHKD.

How loud is the cattle siren?

There are a number of variables to consider when answering this question. Wind, weather, terrain, and other factors will contribute to how far the sound travels. The heavy duty siren sounds in at 135 db. To give you an idea of how loud that is standing a few feet away from a power mower comes in at 107 db while a jet engine from 100 feet away is 140 db.

LIMITED WARRANTY

Pierce Arrow Inc. warrants that the goods, equipment, and merchandise manufactured by Pierce Arrow Inc. are free from defects in material and workmanship. The limited warranty includes replacement or repair of defective mechanical and electrical parts for a period of two years from the date of shipment by Pierce Arrow Inc.

OBTAINING WARRANTY SERVICE

Pierce Arrow Inc. must be notified of any defect before repair or replacement may be granted. The merchandise must be delivered by the purchaser to Pierce Arrow Inc. in Henrietta, Texas at the purchaser's expense. Any repairs not made by Pierce Arrow Inc. are not covered by the limited warranty and are the responsibility of the purchaser.

Pierce Arrow Inc. reserves the right to repair or replace defective parts or products in its sole discretion. The cost of any repairs not covered by the warranty will be charged to the purchaser.

EXCLUSIONS

All Pierce products are manufactured for a specific intended purpose. The Pierce Arrow Inc. limited warranty does not cover, and Pierce Arrow Inc. is not liable for, damage arising from any use other than the specific intended use of each product.

All coolers manufactured by Pierce are warranted for general cooling, and are not guaranteed to produce cooling sufficient for any specific purpose or for specific temperature. Pierce is not liable for any injury or damage arising from insufficiently cooled objects placed in the cooler, including but not limited to medications and perishables.

The Pierce Arrow Inc. limited warranty does not cover:

- Ongoing maintenance parts or repair due to normal wear and tear, and
- Any change or defect due to accident, misuse or any use for which the equipment was not intended, improper or unauthorized repair, failure to provide regular maintenance, and deterioration due to weather or road conditions.

Purchasers should consult their owner's manual for safety, installation, operation, and maintenance guidelines.

The Pierce Arrow Inc. limited warranty does not cover purchaser's cost of labor, transportation, shipping damages, installation or removal costs, down time, loss of profit or goodwill, or any other special, incidental, indirect, or consequential damages,

concerning or related to any product or part, whether based upon negligence, strict liability, breach of contract, breach of warranty, misrepresentation, or any other legal theory.

Merchandise manufactured by Pierce Arrow Inc. is not designed or intended for the movement of people and are not to be used in the operation of elevators or other improper uses. Any improper use of the product may void the warranty.

OTHER MANUFACTURERS' WARRANTIES

Pierce Arrow Inc. makes no warranty, expressed or implied, to finished products manufactured or supplied by other manufacturers, and sold by Pierce Arrow Inc. to the purchaser, including but not limited to, any vehicle to which our product is affixed and any accessories. Such merchandise is subject to the manufacturer's warranty only, which will be provided upon request.

CONDITIONS OF SALE

When placing an order with Pierce Arrow Inc., the terms and conditions provided for payment, shipping, delivery and claims create an agreement between the purchaser and Pierce Arrow Inc. The agreement is to be performed in Clay County, Texas.

RETURNS: No returns are accepted without prior authorization. All items must be returned in their entirety. Please contact a sales representative for authorization. Upon authorization, returns must be shipped freight prepaid and may be subject to a 15% restocking fee. Please do not send returns COD. No returns will be accepted later than 30 days from the date of invoice.

DAMAGED GOODS: Pierce Arrow Inc. is not responsible for, and has no liability for:

- Damage arising during shipment
- Any change or defect due to accident, misuse or any use for which the equipment was not intended, improper or unauthorized repair, failure to provide regular maintenance, and deterioration due to weather or road conditions.

CLAIMS: Claims for breakage or damages during shipment must be made to the carrier at the time of delivery. If a signature is required, you must notify the driver and sign that there was damage. You must notify Pierce Arrow Inc. of the damage promptly so that a claim can be filed.