

WIRELESS REMOTE to ROUND SOLENOID ASSEMBLY


PIERCE

Pierce Arrow Inc. • www.piercearrowinc.com • 1-800-658-6301
549 U.S. HWY 287 S. • Henrietta, Texas 76365


PS002 Wireless Remote transmitter



PS002 Wireless Remote receiver

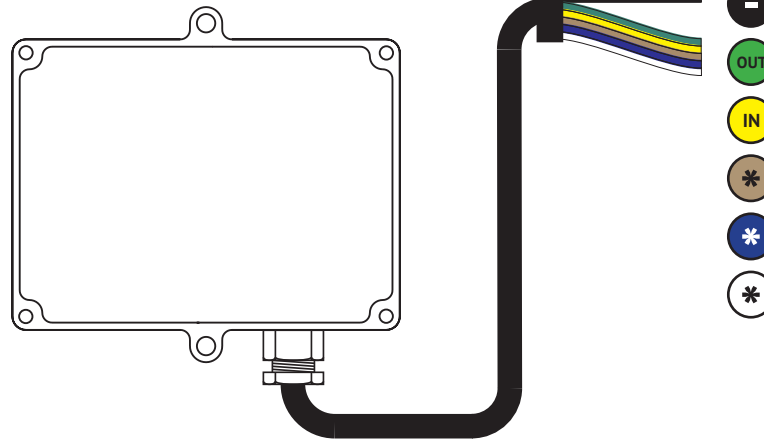

PS528C Round Solenoid Assembly

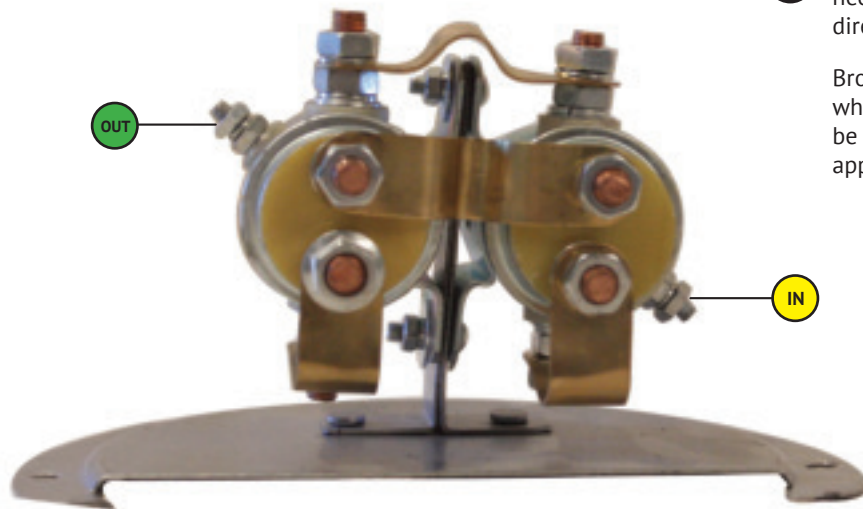

- Red (12V POWER) needs to be wired directly to the battery.
- Black (GROUND) needs to be wired directly to the battery.

Brown, blue, and white will not be used in this application.

CATEGORY	REMOTE
-----------------	--------

PART NO.	PS002 to PS528C
-----------------	-----------------

PRODUCT DESCRIPTION
Two-Function Wireless Remote to Round Solenoid Assembly

WIRING DESCRIPTION
This chart depicts wiring from a Pierce PS002 wireless remote to a Pierce PS528C Round Solenoid Assembly.
NOTE: Use #2 or #4 gauge cable for all connections. Use a 5/16-18" x 3/4" bolt for the ground connection. Wiring not included.

WIRING CHART

Connect the wires to the corresponding signs.

- | | |
|----------------|------------------|
| 12 V (red) | NOT USED (brown) |
| GROUND (black) | NOT USED (blue) |
| OUT (green) | NOT USED (white) |
| IN (yellow) | |